

INSTALLATION PROCEDURE



1 Shotcrete slope with 300mm topsoil





2 Lay and fix 2 layers of the 3-dimensional turf reinforcement mat



3 Spray a layer of 100mm thickness of fiber soil



4 Lay and fix Geomat

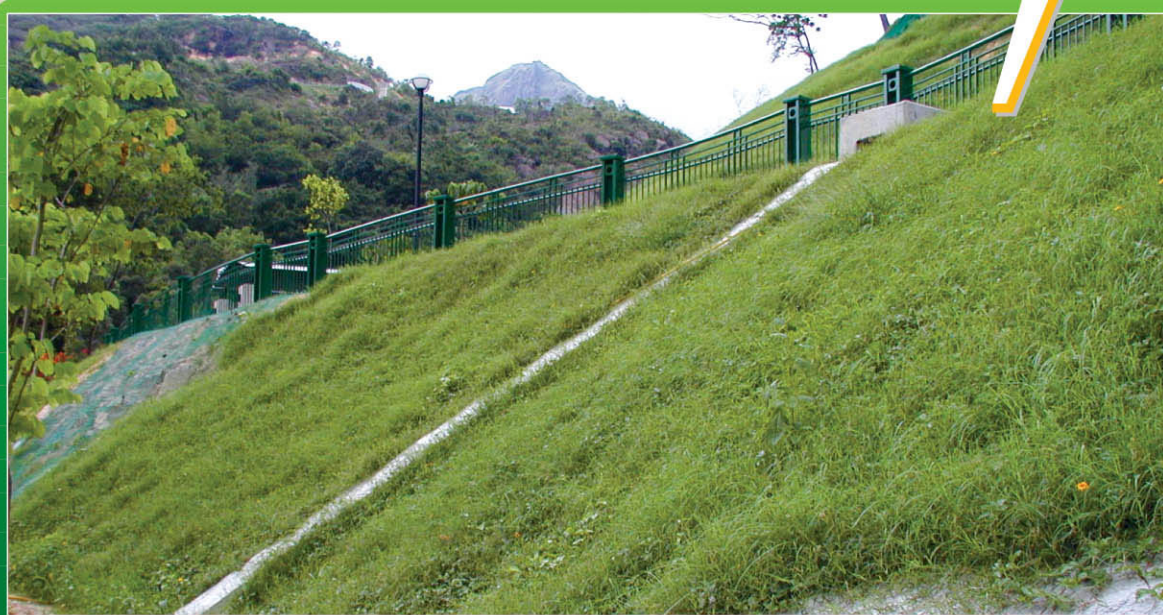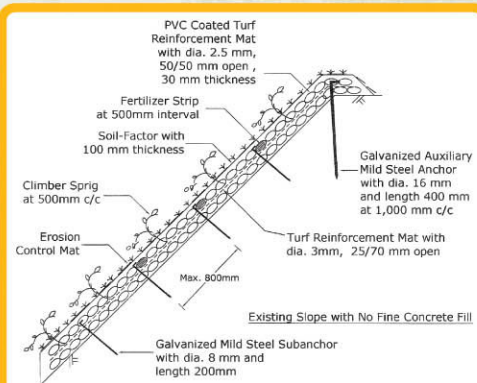

5 Completion of work

SPECIFICATION OF SOIL FIBER SYSTEM

Fiber	pH Value	Moisture	Organic Matter content	Carbon Content	Total Nitrogen Content	Carbon Nitrogen Ratio	Dry Density	Saturate Density
0.6 kg/cu. m	6.0-7.5	30%-35%	50%-90%	40%-60%	0.1%-1.5%	35:1-50:1	400-450 kg/cu. m	350-400 kg/cu. m



TOYO GREENLAND CO., LTD.
東陽綠化有限公司

No.58, South Section, Wah Shan Village, Sheung Shui, N.T., Hong Kong.

Tel: (852) 2639 9312 Fax: (852) 2377 2150 Web-site: <http://www.toyogreen.com> E-mail: danielho@toyogreen.com



Certificate No.: Q11632

